

## From console



### How to manually configure your IP-address from the console

Log in as user 'setup'. You don't need a password.

Select "Network configuration".

**Select eth1.**

**Uncheck dhcp and enter your IP-address, netmask and gateway.**

---

**From webadmin**

**Configuration -> Settings -> Network configuration**

You can change the servers network settings from the *Configuration Settings*  
->*Network configuration*.

Online URL: <https://support.quikbox.com/article.php?id=223>